



HR212522 [LED Flood Beam Light, 3600 Lumens]

Instruction Guide

Contains two plastic collar pieces and hardware. Be careful not to lose these parts.

1. This lamp is designed to install directly into the OE bracket. Do not remove OE bracket from machine.
2. Remove original lamp from bracket on the machine
3. Disconnect original light from electrical connector
4. Place new light (hold plastic collars in place while installing) into OE bracket and install bolt & nut. Use caution as the plastic mounting collars of the new light can be loose.
5. Attach electrical connector to new light
NOTE: Connector on the lamp is reversable. It can be flipped incorrectly if not carefully installed.
6. Adjust beam to desired direction and secure all hardware

